



## Design Theme

### Pro High-Sound Midi-in-Card Karaoke Machine(SK-2017/8)

*Midi Music is a kind of Karaoke format in which each song or sound track is remade with a special software, and to be played out with a rotating video footage as a background plus lyrics with changing colors, assisting as a vocal guide.*

*Midi music occupies very little memory space so a DVD disc of 4.8 GB can be recorded as many as 40,000 songs or more. Therefore, Midi Karaoke machine is developed with a main theme "Party Jukebox", to alleviate the problem of changing discs when hosting a party.*

*As regards the quality of the first generation Midi machine, it must be recognized as inferior to the original sound tracks. They are remade with the same instruments, same beat and rhythm whereas original sound tracks are custom-made individually.*

*This machine supports 2 TB USB external Hard Drive and SD Card up to 128 GB. As the data storage of SD Card / USB increases, more and fuller instruments can be used to upgrade the music quality (call it high sound Midi). These days, even MP3 Audio format with multiplexed vocal is used in making Midi a better and acceptable quality!*

*More Midi Music can now be stored in SD Card/USB. In an SD Card of 32 GB, almost like 60,000 high sound Midi songs can be stored.*

*Each Midi machine is specially designed to play different quantity in different languages of Midi music. It is advised that you should check before you buy.*

*No matter how many Midi songs in an SD Card the machine can play, there bound to be some of your favorites NOT there ! No worry! Just source them from the Internet. However, it should be noted that only MTV songs ( AVI, DIVX format) files downloaded can be merged and share the Midi Song Search Menu. In order to do this, your MTV files should be saved in USB, not in the SD Card, in the following manner:*

1. Make " \_\_usrdat" folder in an USB or external Hard Drive.
2. Save the MTV files with "6 digit No. - Title - Singer.avi" format in the " \_\_usrdat" folder.
3. Insert Midi SD Card and MTV USB to the machine at the same time.
4. Power on the machine and press "SEARCH" to turn on the SONG SEARCH MENU.
5. Press left/right to select "EXTERNAL". All your MTV songs will be arranged at the "EXTERNAL" folder.

*In this case, your SD Card will be playing Midi songs, and your USB/External Hard Drive will be playing MTV songs, sharing the same SONG SEARCH MENU.*

*No MP3+G songs can be merged and share the Song Song Menu. They will be played in normal file player mode only.*

*This new Midi machine can read most of the media formats of songs you download from the Internet. Formats supported: Midi, MP3+G, CD+G, AVI, DVD, VCD, CD, MP3, WMA, OGG & JPEG. Other Party Features this machine offers are "Changing Background Videos", "Recording your singing", "Programming songs to play out", "Applause anytime you want" and "after singing a song, you have a score".*

*With better quality and a song book of the Midi songs in the Card, this Midi-in-card Karaoke machine is best use at parties by any host. For customers who do not like to "play with computer", this Midi-in-card Karaoke machine is definitely their dream machine!*

*To facilitate you to key in numbers and alphabets with ease, the machine is developed alongside with a special Keyboard Type Remote. You can operate each function efficiently, just by one-touch on the Remote.*

*All standard karaoke functions are maintained e.g. 2 Mic inputs, Echo Adjustment, Key Control, Tempo Control, Multiplex etc.*